


Venetian blinds model Between glass




Place the plate in the channel of the rail. Rotate to 90°. Afterwards install on the inside of the wing of the joinery.




In the top angle of the window, on the side where the control of the blinds should be, make an aperture with drill 8mm.



In the aperture infix the spring of the guide and pull the cord through it. Pass the flexible linkage of the control stick through the other aperture.

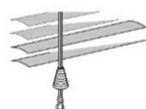


Pass the cord through the bell and in the bottom end make a big enough stator node. Drop the bell on the node.

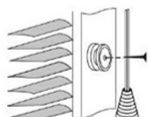


Install the roller (stop-mechanism) of the cord on the joinery considering the length and the side of the control.



Add the nozzles of the flexible linkage and the control stick. Put the plastic cap on.

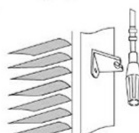

Considering the length of the rotating stick install its fixator.

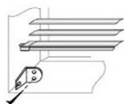

Fixators of the blinds: They should be installed in the bottom part of the joinery. Their position is in line with the width and height of the bottom profile.