




Wooden venetian blinds models 25mm, 50mm




Place the plate in such a way that it does not interfere with the mechanisms inside the profiles of the blinds. Attach the plate with screws in one of the illustrated ways.




Afterwards place the upper profile of the blinds as illustrated on the scheme.



Then rotate the locking taper.

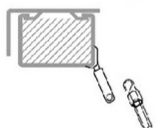

Attach the hook to the ear of the worm gear of the PVC stick.

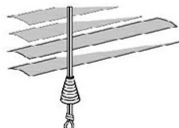

Take the cord through the bell and in the bottom end make a big enough stator node. Drop the bell on the node.



Side guiding of the blinds: Plates should be installed in a way that allows the cord to hang vertically. The cord should be passed through the keg, it should be stretched and locked up with a screw.



Place the decorative cornice on the upper track of the blinds.