



www.kamax.bg
 online.kamax.bg




Installation guide



External venetian blinds models C 80, Z 90



Assemble the plates in a kit (the number of components in the kit depends on the way of installation). Mark the places for installation on the plates considering the position of the mechanisms in the blinds.

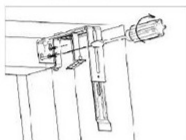


Install the blinds with suitable screws.




Drop the blinds 25cm down.




Attach the blinds to the mounting plates. You have to consider the sticker in regard to the size of the blinds. The sticker is attached to the upper profile and should be positioned facing the inside of the joinery.

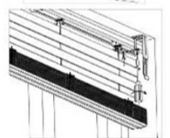


Rotate the moveable splints on the plates and fix the blinds.

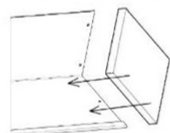


Install the side covers of the decorative box (if they are included in the kit).

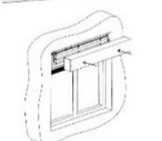

Place the box on the blinds.

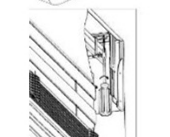

Fix the box to the mounting plates with self-tapping screws.

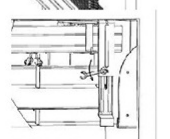


Regulate the position of the stretching splint of the plate to the box.




Put in a set the guides with the brackets for installation. The number of brackets needed depends on the height of the blinds. It is recommended that the distance between the individual brackets of the guide is no more than 80 cm.



In closed position of the blinds, thread the nozzles of the slats in the guide.

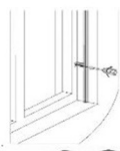

Install the brackets of the guide to the joinery with suitable screws and keep the plumb position. Regulate the forward position of the guide so that it is placed in the center of the slats.

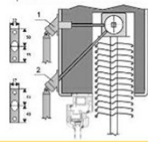

Mark and drill an aperture in the joinery according to the desired way of installation (45° (2) or 90° (1)). The reducing agent of the blinds offers the option for axial and angular regulation so that the arm of the cardan link matches the aperture of the reducing agent. Cut the arm to the necessary length and install it on the joinery.
