


Awnings model Crystal Rido

Awning model Crystal Rido is a windproof vertical cassette awning. All components are assembled and seized in the box.



Attach the guides of the nozzles to the box.

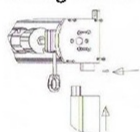

Stretch the awning on the place for installation and level it. Installation can be executed through the ear of the bracket, through the plate to the floor or through the guides.



Drop the canvas. Drill apertures for the fixing pins. Place the pins. The shells of the pins are installed at the side of the guide and help preserving them when the canvas is lifted.



Place the crank in the ear of the reducing agent and open the awning. Rotate the crank in upward direction to stretch the fabric.