

Roller blinds model Perfect fit

Necessary instruments:


- hex key 4 mm
- cross screwdriver




Place the bottom profile of the frame and the blinds in the guides of the frame.



Fix hard with two screws on each angle.

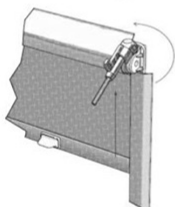


Pull the blinds down (do not lift them back as they have to lift on their own because of the tightening). Place a hex key 4mm in the hexagonal aperture at the control end. Rotate counter clockwise to add tightening until the blinds start to lift. Tightening is finished when the blinds are fully opened.

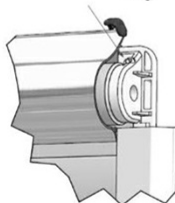

Press the fixing bracket in the hexagonal slot to ensure tightening. Place the decorative caps.



To make sure all brackets are in the right position for installation (85mm from the glass holder) use a credit card at the angle of the window to position the bracket. For easier positioning use a detergent as a washing liquid for the foundation of each bracket. Level the bracket up with the upper or bottom part of the credit card and position the bracket by pressing it between the glass and the rubber seal of the window. Repeat this for all 4 angles of the window and the intermediate brackets (if necessary), and after clean the excess lubricant before installing the frame.

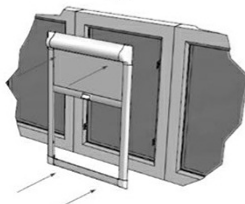

Level up the apertures of the frame and the brackets. Press hard the frame over each bracket. The blinds are now installed.