





EXTERNAL VENETIAN BLINDS C 50, C 80, Z 90

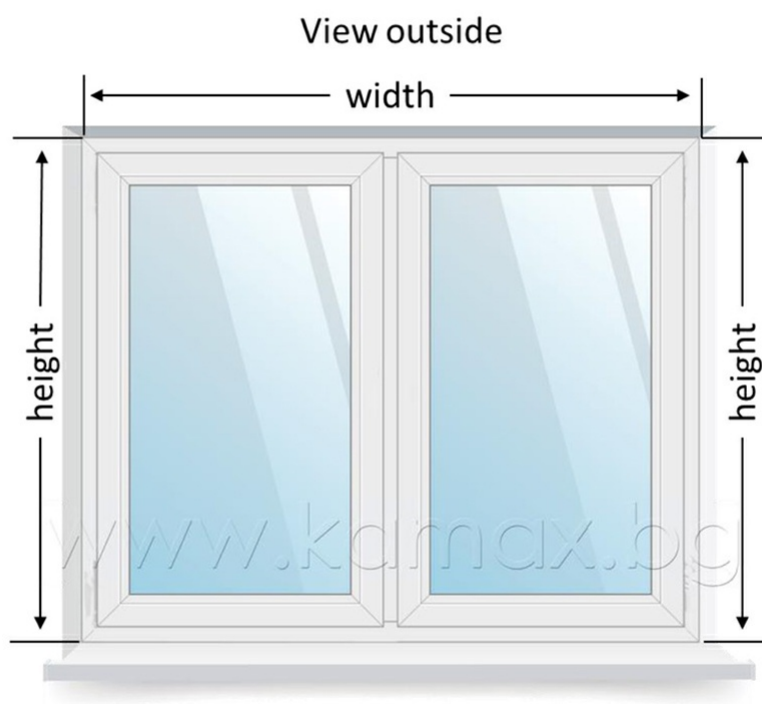


Installation on the joinery (or exported installation)

1. How to define the width – measure precisely the width of the window (or the distance between the two walls) in the upper, medium and bottom part, take the smallest of the three values and subtract 0.5 cm.
2. How to define the height – measure precisely the height of the window (or the distance from the lintel to the window sill) and subtract 1.0 cm.
3. Control of the blinds – you define whether it is left or right (depending how it is viewed from the side of the room) and the desired length of the control flex.

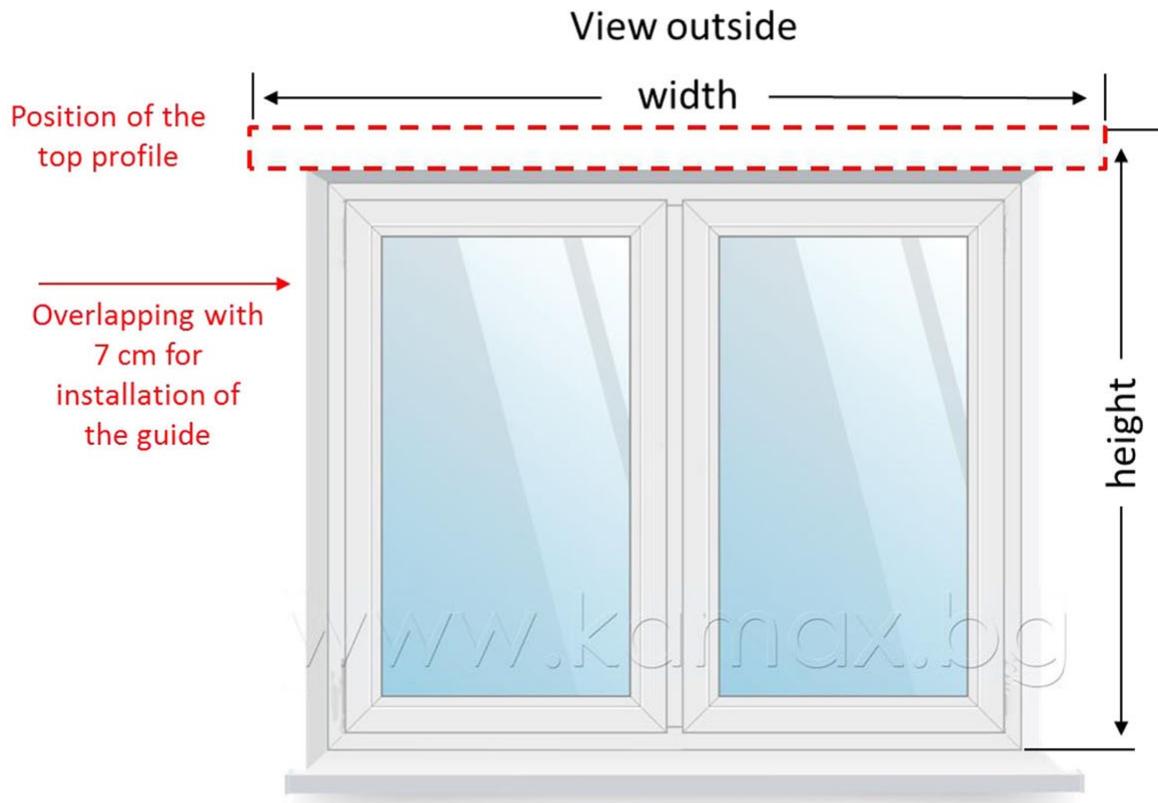


Installation on a wall

1. How to define the width – measure precisely the width of the window (or the distance between the two walls) in the upper and bottom part, take the larger of the two values and add 7.0 cm on each side.
2. How to define the height – measure precisely the height of the window (or the distance between the lintel and the window sill) and add from 25.0 to 30.0 cm, or measure from the place where you will install the box next to the window sill.
3. Control of the blinds – you define whether it is left or right (depending how it is viewed from the side of the room) and the desired length of the control flex.

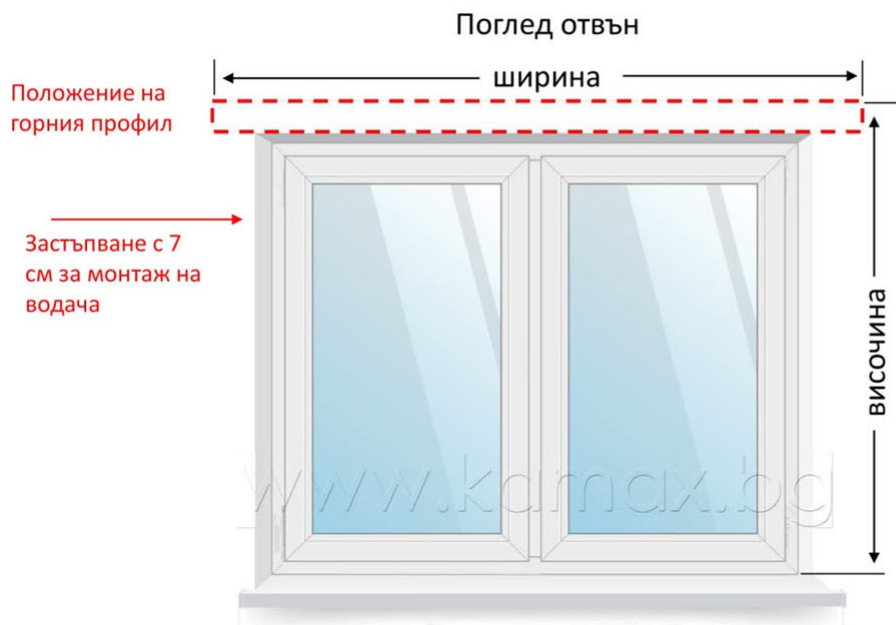

Монтаж върху стена

1. Как да определим ширината - премерете точно ширината на прозореца (или разстоянието между двете стени) в горната и долната част, вземете по-голямата стойност и добавете по 7,0 см от всяка страна.
2. Как да определим височината - премерете точно височината на прозореца (или разстоянието от щурца до подпрозоречния перваз и добавете от 25,0 до 30,0 см. Или премерете от мястото където ще монтирате кутията до подпрозоречния перваз.
3. Управление на щората - определяте дали да е дясно или ляво (гледано от помещението) и желаната дължина на шнура за управление.

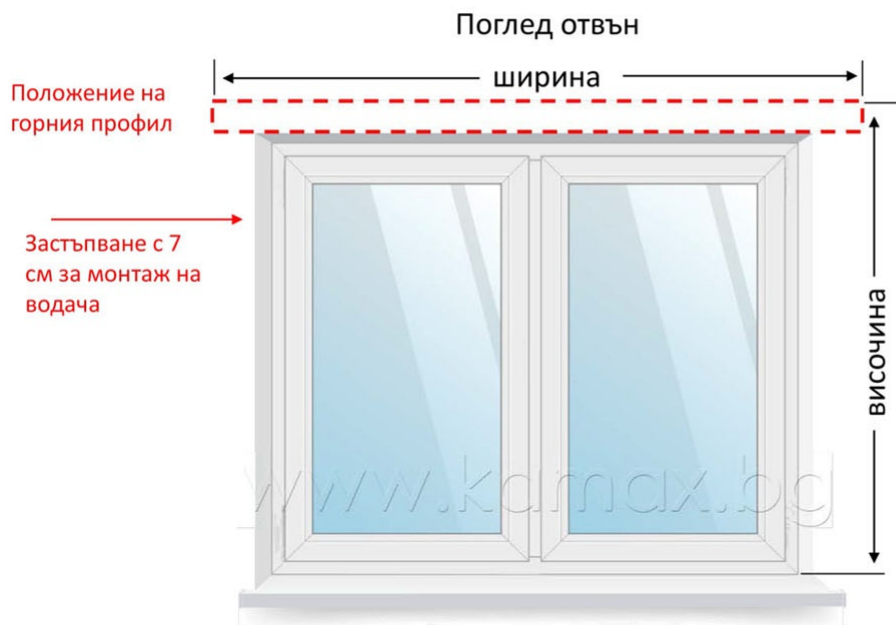

Монтаж върху стена

1. Как да определим ширината - премерете точно ширината на прозореца (или разстоянието между двете стени) в горната и долната част, вземете по-голямата стойност и добавете по 7,0 см от всяка страна.
2. Как да определим височината - премерете точно височината на прозореца (или разстоянието от щурца до подпрозоречния перваз и добавете от 25,0 до 30,0 см. Или премерете от мястото където ще монтирате кутията до подпрозоречния перваз.
3. Управление на щората - определяте дали да е дясно или ляво (гледано от помещението) и желаната дължина на шнура за управление.