


Awnings models Standard, Elegance

Awnings models Standard and Elegance are a “monoblock” system. All components are assembled to a main carrying profile of steel, which should be attached with mounting plates.

Mounting plates are two, three or four depending on the area of the awning. Plates are different depending on the way of installation – on a wall or a ceiling. The place where they will be attached should be steady and made of robust material, preferably concrete.



Mark the spots for installation on the plates considering the position of the folding arms on the carrying profile. Mounting plates should be positioned as close as possible to the spot where the arms are attached to the profile in order to avoid twisting.



Install the plates using suitable fastening elements according to the material of the place for installation and level them.




Attach the carrying profile to the plates and place fastening screws.



Place the crank in the ear of the reducing agent and open the awning.

Regulate the angle of the awning:

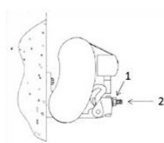

- Regulate the angle according to the client's desired position. Each arm is regulated individually. Unfasten the counterweight (position 1), which is at the front of the grip of the arm to the carrying profile. With a hex key you can rotate the regulating screw (position 2) in the proper direction for lifting or dropping the arm. Afterwards fasten the counterweight.
- If necessary you can regulate the angle of the ear of the reducing agent for more comfortable rotation of the crank. Remove the big decorative cap of the reducing agent and regulate the angle.